

Initial setting for on-road:

Tighten the screw clockwise till the end then unscrew 4 to 5 turns. (This setting will allow you to shift at 2200 rpm on the wheel and approx. 17,000 RPM on the engine)

Initial setting for off-road:

Tighten the screw clockwise till the end then unscrew 5 to 6 turns. (This setting will allow you to shift at 1850 RPM on the wheel and approx. 17,000 RPM on the engine)

Shift point setting:

After the initial setting you can fine tune by driving on the track. Listen to hear the shifting point on acceleration.

Make incremental changes by 1/4 turns.

Turn clockwise to shift on higher RPM, turn counter clock-wise to shift on lower RPM.



There is half a fuel tank brake-in period. During brake-in your gearbox might not shift accurately.



Do not oil your gearbox!



Oil may get in the gearbox while you are maintaning / cleaning your car or changing the ball bearings. This may prevent shifting.

After driving a certain period the oil will get out by centrifugal force and the shifting will function normally.

