

For mounting W5 side body holders.

The Side guards must be drilled in order to mount side body holders as instructed below.
Bolt the side body holders to side guards with suplied screws.

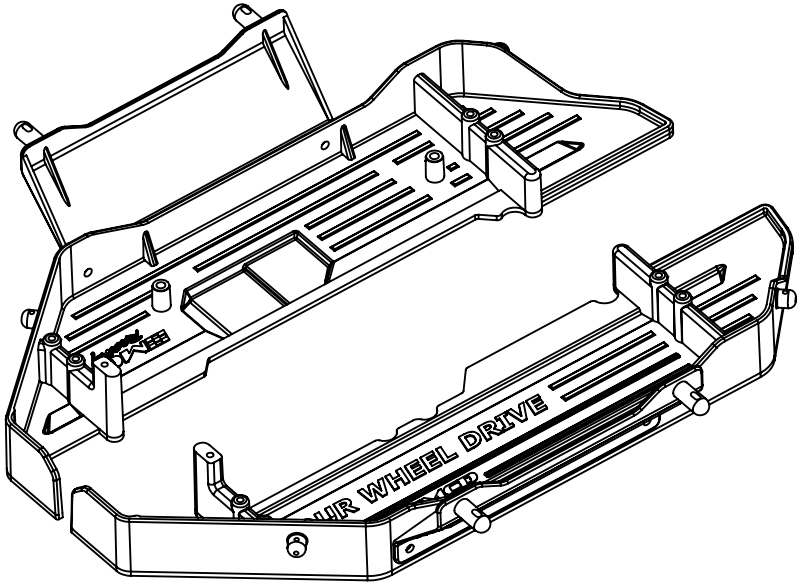

Left

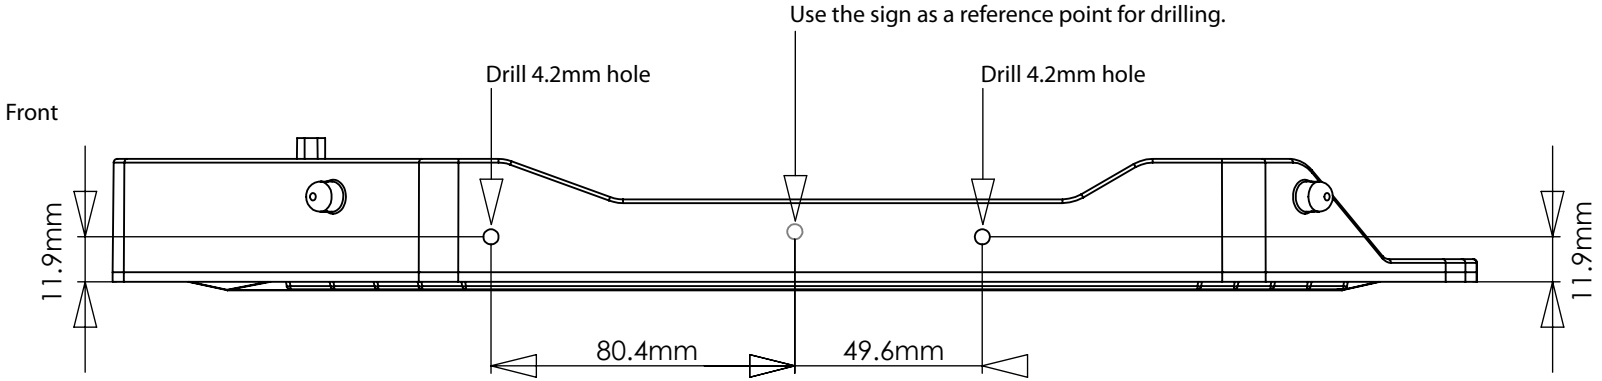

Right

