



ROLL CENTER FRONT

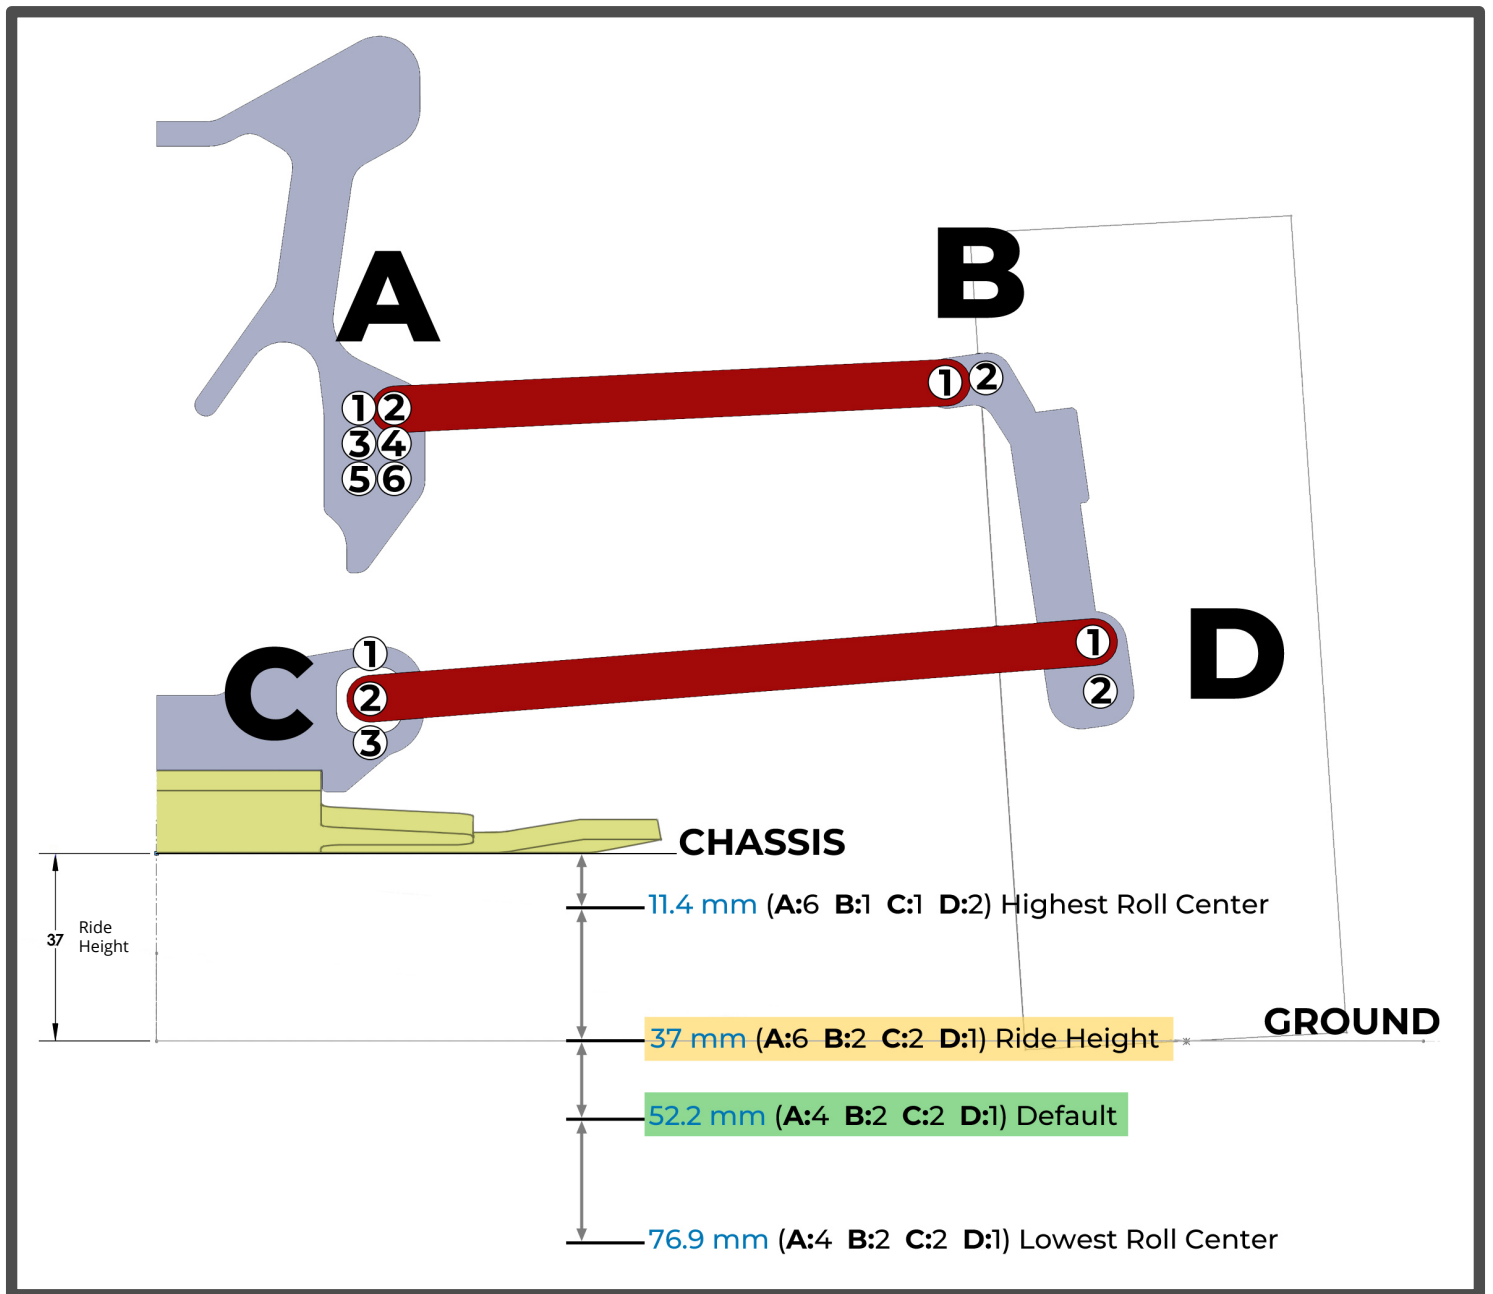

NOTES:


ROLL CENTER FRONT

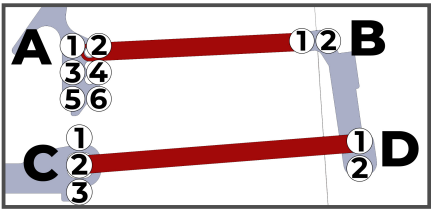

Upper Wishbone		Lower Wishbone		Roll Center from Chassis / mm
In	Out	In	Out	
A	B	C	D	
6	1	1	2	11.4
6	2	1	2	11.7
5	1	1	2	13.2
5	2	1	2	13.4
6	1	2	2	15.4
6	2	2	2	15.8
5	1	2	2	17.2
5	2	2	2	17.5
6	1	3	2	19.4
6	2	3	2	19.8
5	1	3	2	21.3
5	2	3	2	21.5
4	2	1	2	22.1
4	1	1	2	22.4
3	2	1	2	23.3
3	1	1	2	23.6
4	2	2	2	26.2
4	1	2	2	26.5
3	2	2	2	27.5
3	1	2	2	27.8
4	2	3	2	30.4
4	1	3	2	30.7
6	1	1	1	31.6
3	2	3	2	31.6
3	1	3	2	32
6	2	1	1	32.2
2	2	1	2	33.2
1	2	1	2	33.9
5	1	1	1	34.2
2	1	1	2	34.3
5	2	1	1	34.6
1	1	1	2	34.9
6	1	2	1	36.5
6	2	2	1	37 (Ride Height)
2	2	2	2	37.5
1	2	2	2	38.1
2	1	2	2	38.6
5	1	2	1	39.1


Upper Wishbone		Lower Wishbone		Roll Center from Chassis / mm
In	Out	In	Out	
A	B	C	D	
1	1	2	2	39.2
5	2	2	1	39.5
6	1	3	1	41.3
2	2	3	2	41.8
6	2	3	1	41.9
1	2	3	2	42.4
2	1	3	2	42.9
1	1	3	2	43.6
5	1	3	1	44
5	2	3	1	44.4
4	2	1	1	47.1
4	1	1	1	47.5
3	2	1	1	48.9
3	1	1	1	49.4
4	2	2	1	52.2 (Default Set-up)
4	1	2	1	52.6
3	2	2	1	54
3	1	2	1	54.5
4	2	3	1	57.3
4	1	3	1	57.7
3	2	3	1	59.1
3	1	3	1	59.6
2	2	1	1	63.4
1	2	1	1	64.3
2	1	1	1	65.2
1	1	1	1	66.1
2	2	2	1	68.7
1	2	2	1	69.6
2	1	2	1	70.5
1	1	2	1	71.5
2	2	3	1	74
1	2	3	1	74.9
2	1	3	1	75.9
1	1	3	1	76.9

ROLL CENTER REAR

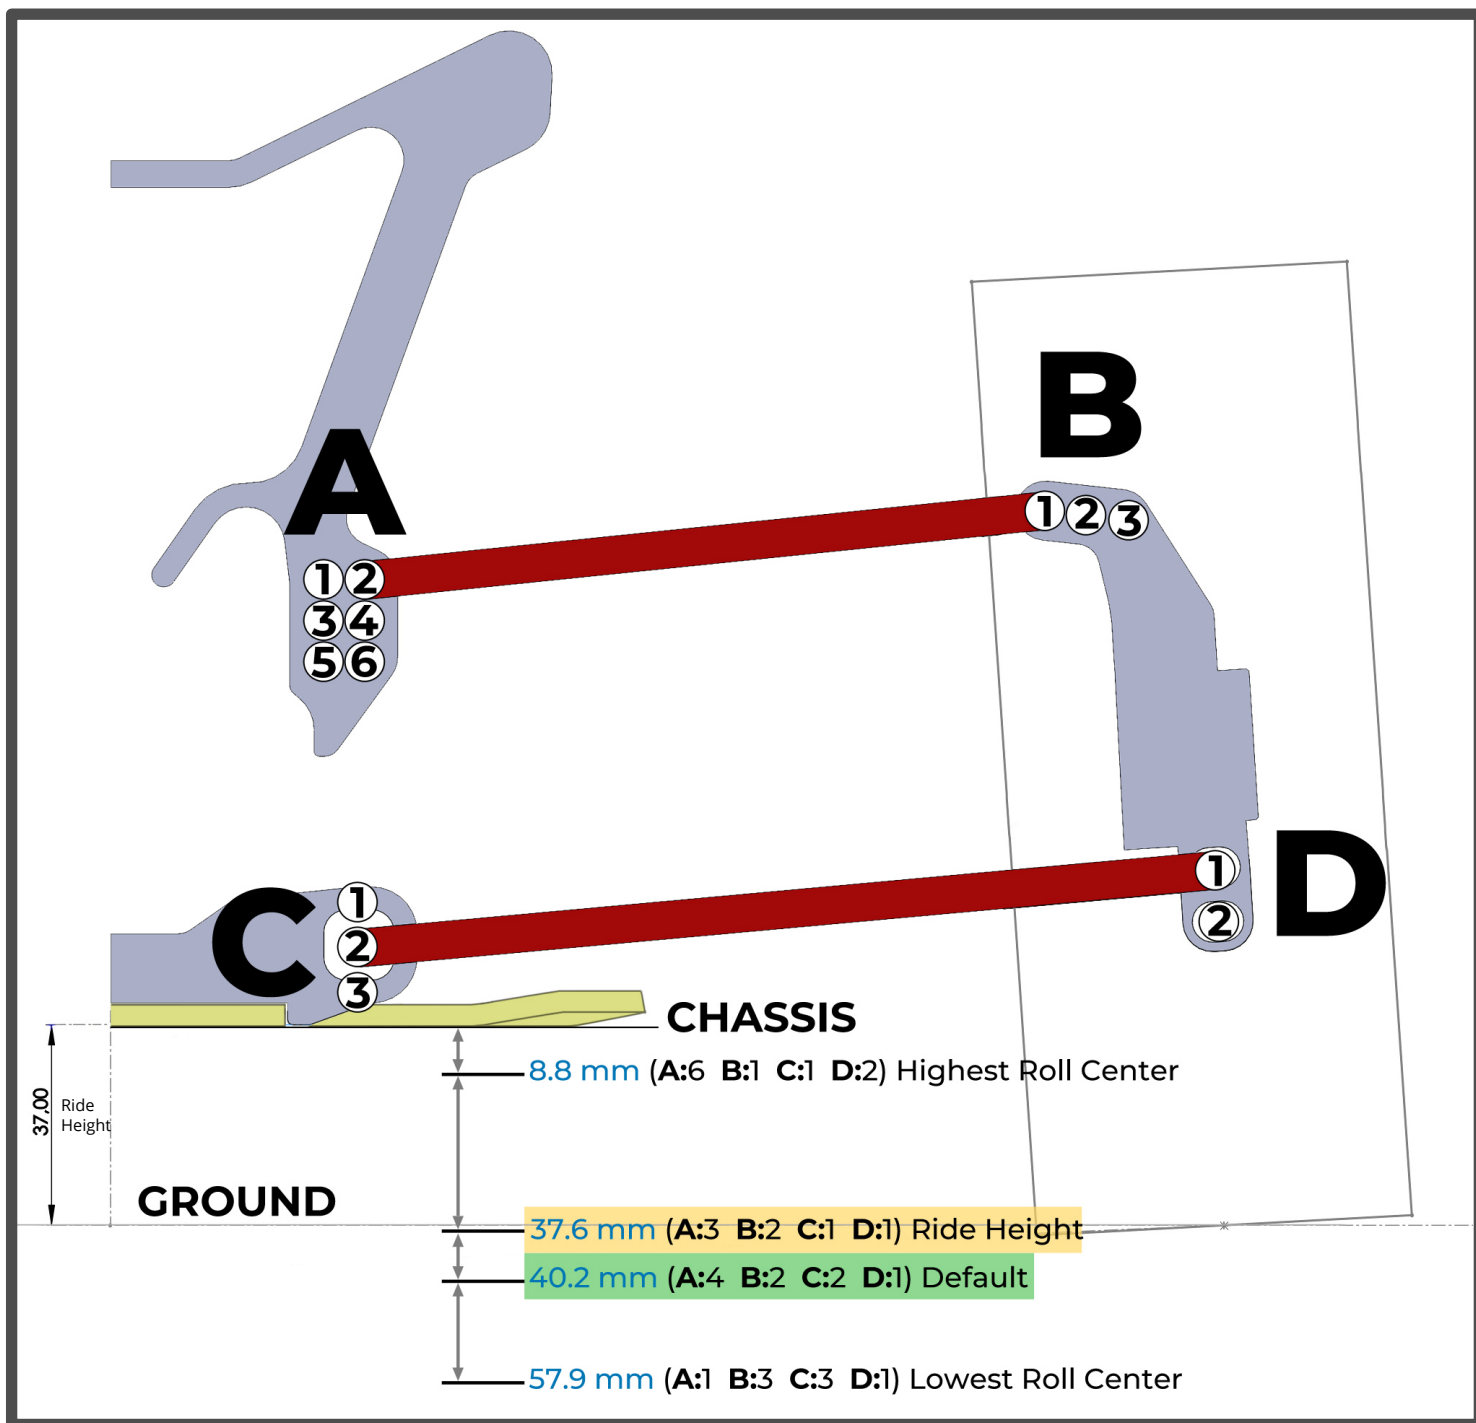

NOTES:


ROLL CENTER REAR

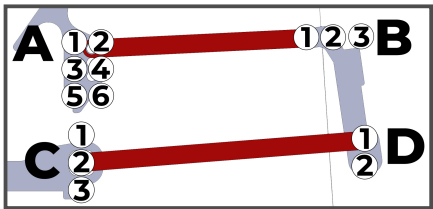

Upper Wishbone		Lower Wishbone		Roll Center from Chassis / mm
In	Out	In	Out	
A	B	C	D	
6	1	1	2	8.8
5	1	1	2	10.4
6	2	1	2	10.4
5	2	1	2	11.8
6	3	1	2	11.8
6	1	2	2	12.2
5	3	1	2	13.1
5	1	2	2	13.8
6	2	2	2	13.8
5	2	2	2	15.2
6	3	2	2	15.3
6	1	3	2	15.6
4	1	1	2	16.3
5	3	2	2	16.6
5	1	3	2	17.1
6	2	3	2	17.2
3	1	1	2	17.5
4	2	1	2	17.8
5	2	3	2	18.7
6	3	3	2	18.8
3	2	1	2	18.9
4	3	1	2	19.3
4	1	2	2	19.7
5	3	3	2	20.1
3	3	1	2	20.2
3	1	2	2	20.9
4	2	2	2	21.3
3	2	2	2	22.4
4	3	2	2	22.7
4	1	3	2	23.1
6	1	1	1	23.6
3	3	2	2	23.7
2	1	1	2	24.1
3	1	3	2	24.3
4	2	3	2	24.7
1	1	1	2	24.9
2	2	1	2	25.5
5	1	1	1	25.7

Upper Wishbone		Lower Wishbone		Roll Center from Chassis / mm
In	Out	In	Out	
A	B	C	D	
3	2	3	2	25.8
6	2	1	1	26
1	2	1	2	26.2
4	3	3	2	26.2
2	3	1	2	26.8
3	3	3	2	27.2
1	3	1	2	27.5
6	1	2	1	27.5
2	1	2	2	27.6
5	2	1	1	27.9
6	3	1	1	28.2
1	1	2	2	28.4
2	2	2	2	29
5	1	2	1	29.6
1	2	2	2	29.7
6	2	2	1	29.9
5	3	1	1	30
2	3	2	2	30.4
1	3	2	2	31
2	1	3	2	31
6	1	3	1	31.3
1	1	3	2	31.8
5	2	2	1	31.8
6	3	2	1	32.2
2	2	3	2	32.5
1	2	3	2	33.2
5	1	3	1	33.5
4	1	1	1	33.8
6	2	3	1	33.8
2	3	3	2	33.9
5	3	2	1	34
1	3	3	2	34.5
3	1	1	1	35.5
5	2	3	1	35.7
4	2	1	1	36.2
6	3	3	1	36.3
3	2	1	1	37.6 (Ride Height)
4	1	2	1	37.8

ROLL CENTER REAR

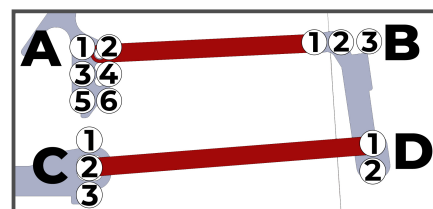

Upper Wishbone		Lower Wishbone		Roll Center from Chassis / mm
In	Out	In	Out	
A	B	C	D	
5	3	3	1	38.1
4	3	1	1	38.4
3	1	2	1	39.4
3	3	1	1	39.7
4	2	2	1	40.2 (Default Set-up)
3	2	2	1	41.6
4	1	3	1	41.7
4	3	2	1	42.4
3	1	3	1	43.3
3	3	2	1	43.8
4	2	3	1	44.1
2	1	1	1	44.6
3	2	3	1	45.6
1	1	1	1	45.7
4	3	3	1	46.5
2	2	1	1	46.8
1	2	1	1	47.8
3	3	3	1	47.9
2	1	2	1	48.6
2	3	1	1	48.9
1	3	1	1	49.7
1	1	2	1	49.7
2	2	2	1	50.8
1	2	2	1	51.8
2	1	3	1	52.6
2	3	2	1	53
1	1	3	1	53.7
1	3	2	1	53.8
2	2	3	1	54.8
1	2	3	1	55.8
2	3	3	1	57.1
1	3	3	1	57.9